

****Password Keeper – Secure Offline Password Manager****

Password Keeper is a dedicated electronic device that securely stores your usernames, passwords, and notes offline. In today's digital life, we use different credentials for various websites and apps, which are easily forgotten. Password Keeper keeps all your login information in one portable, secure device.

To get started, download the Windows companion software from **passwordkeeperbook.com**, where you'll also find setup tutorials. Set a device password for added security, and rest assured that your data stays locally stored—never in the cloud. Simple, physical, and truly private, Password Keeper is your trusted companion for password peace of mind.

1. Powering On Your Password Keeper

To turn on your Password Keeper, simply connect it to a power source using the included Type-C cable. You may plug the cable into:


- A USB Type-C port on your laptop,
- A USB Type-C port on a compatible mobile phone, or
- Any standard 5V USB charger.

Once connected to power, the device will start automatically.


Note: Some fast chargers may not be compatible with Password Keeper. If the device does not turn on after connecting, please try a different charger that supplies a standard 5V output.




2. Touch Button Functions
The Δ (triangle) button allows you to scroll up through your password records. An audible beep will confirm each press when moving upward.

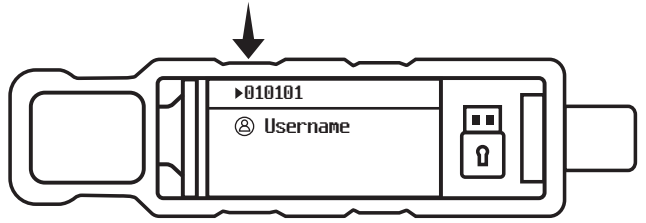


3. Touch Button Functions
The ∇ (inverted triangle) button is used to scroll down through your stored password entries.

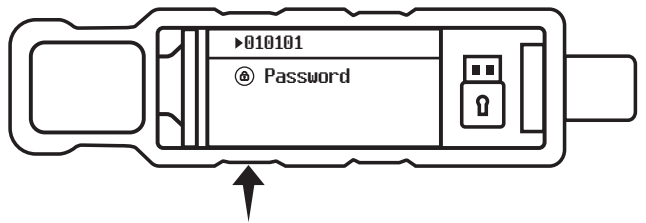


4. Touch Button Functions
When multiple password records are stored, the \triangleleft (left arrow) button allows you to quickly navigate or page up through entries, such as by alphabetical order or categories.

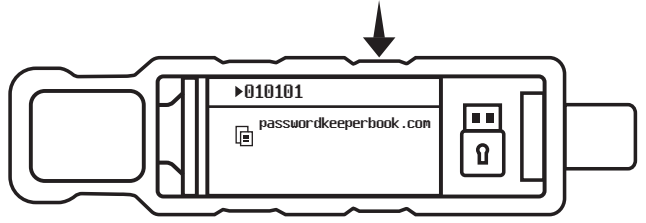


5. Touch Button Functions
When multiple records are stored, the \triangleright (right arrow) button allows you to page down through your password entries to locate the desired record.

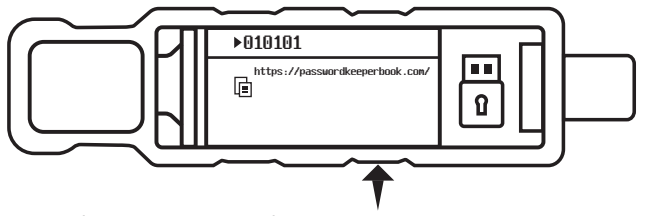

6. Touch Button Functions
Simultaneously pressing the Δ and ∇ buttons will input the currently displayed value on your Password Keeper into the username or password field box of the browser on your connected computer.

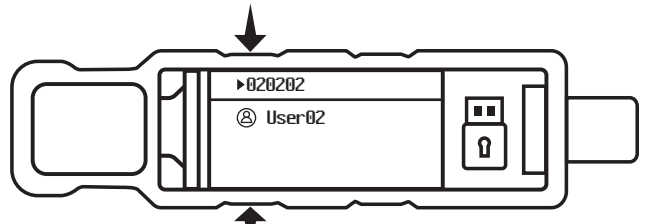

7. Touch Button Functions
Hold the \triangleleft (left arrow) button and then press the \triangleright (right arrow) button to quickly jump to the first entry starting with the next alphabetical letter. For example, if you are currently viewing entries that begin with "A" (and there are 10 such entries), and you want to skip directly to the first entry beginning with "D", press and hold \triangleleft , then press \triangleright . This will bypass all remaining "A" entries and take you directly to the start of the "D" section, allowing for faster navigation.

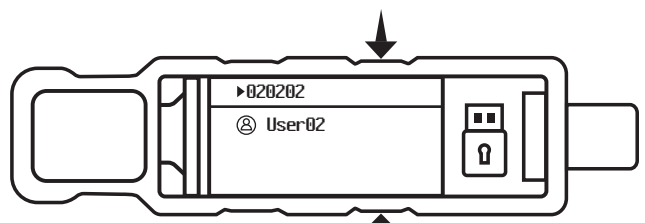

8. Additional Resources
For more detailed user guides and step-by-step operation videos, please visit our official website:

<https://passwordkeeperbook.com/>